


Sensor Configuration Manual All Veko DALI Encelium sensors are programmed with a standard configuration. When the sensor is plugged into the line and is connected with power it will fully function and perform as a motion detection sensor. When on location a re-configuration is needed, a maintenance test is required or the lights need to be manually overtaken this can be done with a DALI Encelium or an other LMS system, configuration manually is limited.

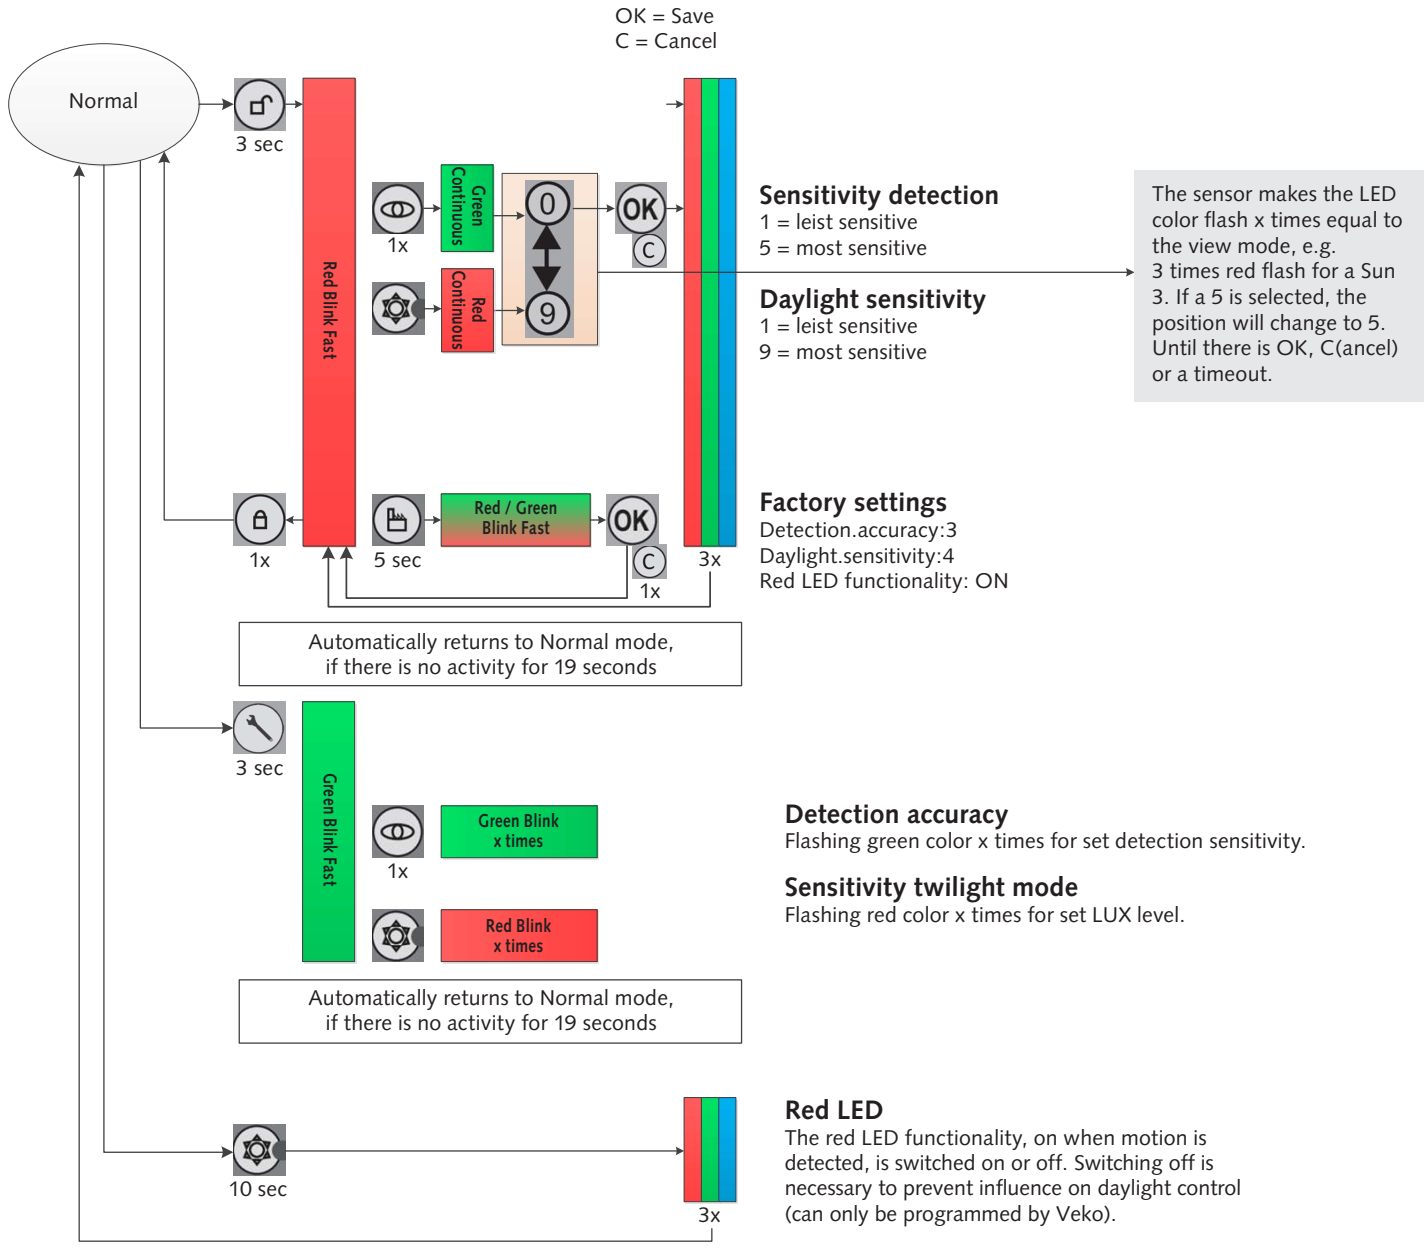

Manual Advanced DALI Encelium Sensor



Product code:
TR-67